

RGBW/RGB/CCT/Dimming 4 Channel LED RF Controller

Model No.: LUX-SLV-VP-REC

4 Channels/DC power socket input/Stepless dimming/Wireless remote control/Auto-transmitting/Synchronize



FC CE RoHS LVD RED

Features

- DC power socket input and 4 channel constant voltage output.
- Match with Skydance's 2.4G single zone or multiple zone single color, dual color and RGB/RGBW remote control.
- One RF controller accept up to 10 remote control.
- 4096 levels 0-100% dimming smoothly without any flash.
- When using with RGB/RGBW light, built in 10 dynamic mode, include jump or gradual change style.
- Auto-transmitting function: Controller automatically transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.

Technical Parameters

Input and Output	
Input voltage	12-24VDC
Input current	1.5A
Output voltage	4 x [12-24]VDC
Output current	4CH,4A/CH,Max 6A
Output power	4 x [48-96]W
Output type	Constant voltage



Dimming data	
Input signal	RF 2.4GHz
Control distance	30m(Barrier-free space)
Dimming gray scale	4096 (2^12) levels
Dimming range	0-100%
Dimming curve	Logarithmic
PWM Frequency	750Hz (default)

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(IVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,IVD,RED

Environment	
Operation temperature	To: -30°C ~ +55°C
Case temperature (Max.)	Tc: +85°C
IP rating	IP20


Warranty and Protection	
Warranty	5 years
Protection	Reverse polarity Short circuit

Mechanical Structures and Installations

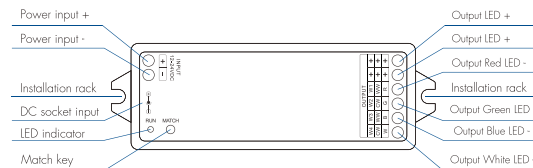


Wiring Diagram

• LUX-SLV-VP-REC for RGB/RGBW




Note: If connect with RGB LED strip, please long press match key for 15s, the controller will become RGB type.

• LUX-SLV-VP-REC for dual color

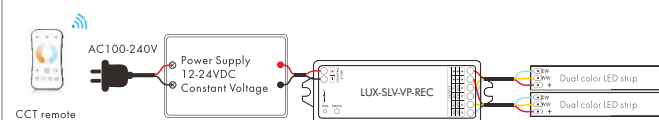

• LUX-SLV-VP-REC for single color

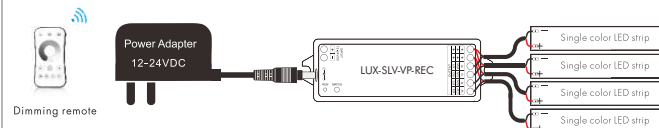

Note: User can connect constant voltage power supply or power adapter as power input.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:


Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Application notes

1. All the receivers in the same zone.



RF remote

Auto-transmitting: One receiver can transmit the signals from the remote to another receiver within 30m, as long as there is a receiver within 30m, the remote control distance can be limitless.

Auto-synchronization: Multiple receivers within 30m distance can work synchronously when they are controlled by the same remote, under same dynamic mode and with same speed.

Receiver placement may offer up to 30m communication distance. Metals and other metal materials will reduce the range.

Strong signal sources such as WiFi routers and microwave ovens will affect the range.

We recommend for indoor applications that receiver placements should be no further apart than 1.5m.

2. Each receiver(one or more) in a different zone, like zone 1, 2, 3 or 4.



RF remote

RGB/RGBW dynamic mode list

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Yellow cyan purple smooth	10	White fade in and out

Dual color control


CH1,CH3=Warm white LED

CH2,CH4=Cool white LED


Each channel can supply up to 96W(@24V) and white balance can be controlled as such:

Color temperature	Cool white	Neutral white	Warm white
Power distribution	CH1=0W,CH2=96W CH3=0W,CH4=96W	CH1=48W,CH2=48W CH3=48W,CH4=48W	CH1=96W,CH2=0W CH3=96W,CH4=0W


Linear dual color tuning

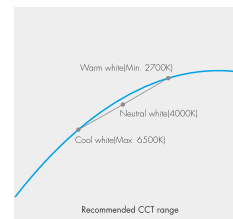

Dimming curve for CCT

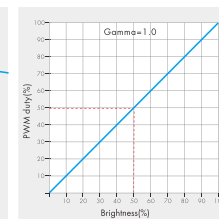

Dimming curve for RGBW/RGB/DIM

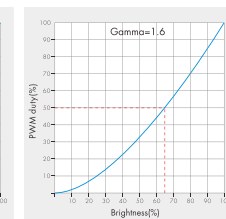

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	1. No power. 2. Wrong connection or insecure.	1. Check the power. 2. Check the connection.
Wrong color	1. Wrong connection of R/G/B/W wires.	1. Reconnect R/G/B/W wires.
Uneven intensity between front and rear, with voltage drop	1. Output cable is too long. 2. Wire diameter is too small. 3. Overload beyond power supply capability. 4. Overload beyond controller capability.	1. Reduce cable or loop supply. 2. Change wider wire. 3. Replace higher power supply. 4. Add power repeater.
No response from the remote	1. The battery has no power. 2. Beyond controllable distance. 3. The controller did not match the remote.	1. Replace battery. 2. Reduce remote distance. 3. Re-match the remote.